
 
## SOEHNLE


# Page Profi 67080 www.soehnle.com.au


#### **OPERATION**




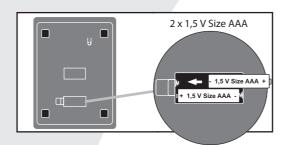



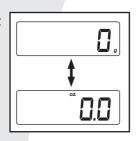

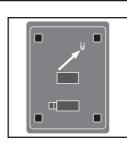


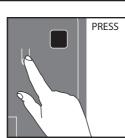






**Sensor-Touch** Touch keys only lightly!


#### WEIGHING **& ADDING**

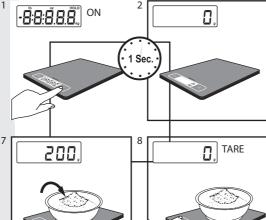


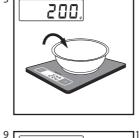


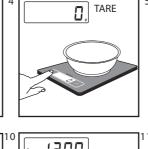

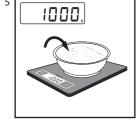


 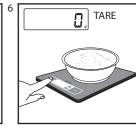




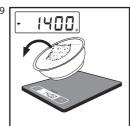





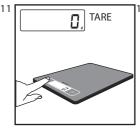


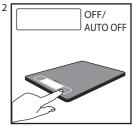



## WEIGHING **LARGE OBJECTS**

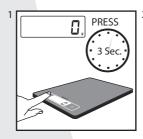

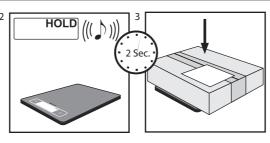


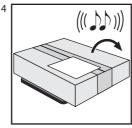


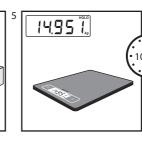


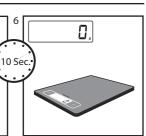


#### **MESSAGES**

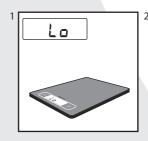

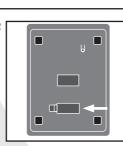


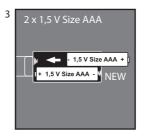




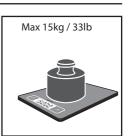

### **CLEANING & MAINTENANCE**

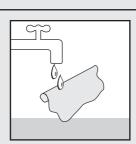



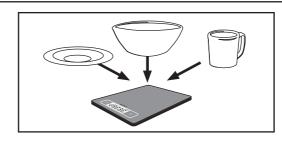

((

**GUARANTEE:** For 5 years as of the date of purchase, Soehnle guarantees against all manufacturing defects or faults. In the event of a guarantee claim please take the scale back to the retailer with the receipt of purchase for a replacement or refund.



BATTERY DISPOSAL EC DIRECTIVE 2008/12/EC: Batteries are not a part of your regular household waste. You must return batteries to your municipalty's public collection or wherever batteries of the respective type are being sold. Batteries containing hazardous materials are marked with these symbols:



Pb = Battery contains lead

Cd = Battery contains cadmium Hg = Battery contains mercury



DISPOSAL OF ELECTRIC & ELECTRONIC DEVICES EC DIRECTIVE 2002/96/EC: This product is not to be treated as regular household waste but must be returned to a collection point for recycling electric and electronic devices. Furter information is available from your municipality, your municipality's waste disposal services or the retailer where you purchased your product.